



MAINTENANCE SCHEDULE

VEHICLE KILOMETERS (MONTHS)

8,000	or	4 months	A	
16,000	or	8 months	A	
24,000	or	12 months	B	
32,000	or	16 months	A	
40,000	or	20 months	C	
48,000	or	24 months	B	
56,000	or	28 months	A	
64,000	or	32 months	A	
72,000	or	36 months	B	
80,000	or	40 months	C	
88,000	or	44 months	A	
96,000	or	48 months	B	
104,000	or	52 months	A	
112,000	or	56 months	C	
120,000	or	60 months	B	
128,000	or	64 months	A	
136,000	or	68 months	A	
144,000	or	72 months	B	
152,000	or	76 months	C	
160,000	or	80 months	A	



A	
<ul style="list-style-type: none"> • Replace engine oil and filter • Inspect tire condition and adjust all tire pressures • Inspect and adjust all fluid levels • Rotate tires and inspect for wear • Inspect function of all lights 	<ul style="list-style-type: none"> • Lubricate all locks and hinges • Inspect engine air filter • Inspect drive belts • 20-point Mazda Health Check • Check for outstanding recalls • Road test
B	
<p>Everything in Service A, plus:</p>	<ul style="list-style-type: none"> • Remove and inspect front and rear brakes • Service brake calipers • Test coolant, inspect hoses and clamps • Inspect all steering and suspension components
C	
<p>Everything in Service A, plus:</p>	<ul style="list-style-type: none"> • Inspect cabin air filter (replace if necessary) • Replace engine air filter

A LA CARTE ITEMS

Alignment	EVERY 24,000KM
Throttle body service	EVERY 40,000KM
Fuel injection service	EVERY 40,000KM
Transmission service (AT / MT, non-SkyActiv)	EVERY 64,000KM
Engine decarbonization service	EVERY 96,000KM
Transmission service (SkyActiv transmissions)	EVERY 80,000KM
Power steering fluid service	EVERY 104,000KM

We recommend you check your engine oil level every second fuel fill-up.

